



# ExpressVote®

Universal Voting System as a Marker



Multilingual

Touch Screen and Display

Allows voters to easily make vote selections and review their selection.

Instruction Panel

A visual guide that shows voters how to use the ExpressVote.

Card Slot

Where the voter inserts their card to activate selections.

Visual Aids

High contrast and zoom functionality.

Front Access Panel

Headphone jack, a port for a Sip-and-Puff device or two-position rocker switch, and Audio-Tactile Keypad make the unit ADA friendly.

Audio-Tactile Keypad

Enables ADA voters to control audio and navigate the ballot.



## **Sample Instructions on How to Vote on an ExpressVote Universal Voting System**

The Election Systems and Software ExpressVote Universal Voting System is a ballot-marking system that will be in use during the upcoming Primary Election on June 2, 2020. Its main purpose is to allow voters with disabilities and other special needs to mark a ballot privately and independently.

If you wish to vote on the ExpressVote, please contact the election office for assistance. When you appear at the Election Office to vote using the ExpressVote, the election judge will give you a ballot that will go in the machine. After the system accepts the ballot, the system will provide instructions on how to vote the ballot. In order to make the ballot easier to read, you can change the contrast and font size. You can mark your choices by touching the screen or by using the keypad, which features written and Braille markings.

The ExpressVote system will confirm your selections on the screen and by audio. After you verify that your selections are correct, the system will fill in your choices on the ballot and print the ballot. The ballot will then go to an election judge for depositing in the ballot box. If you need assistance at any time during the process, simply request it.